



## mounting instruction for wall-bracket

### Note:


**This mounting hardware is meant for dry wall/stud mounting only.** If walls are concrete, brick or plaster, please consult your local hardware store for assistance. **Do not use or attach wire for hanging the wall-bracket, it is meant to engage with appropriate wall screws.**

### Tools needed

Level, Tape Measure, Stud Finder, #3 Slotted Screwdriver, Pencil

### Hardware Included:

- (2) Metal Screws
- (2) Dry Wall Anchors (for dry wall only)
- For stud mounting the anchors are not required, use only the screws.

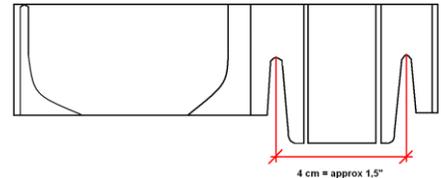

### Mounting Instructions:

1. Determine your desired hanging location. Measure the distance between the two slots provided on the back of the wall-bracket, making sure the measurements are taken from the centers of both slots. The distance between the slots should be 4cm or approximately 1½\"/>
2. Mark the wall with the pencil using this distance. Use a level and a tape measure to ensure a level installation.

### Mounting Considerations:

Do **not** install this bracket :

- a) closer than 1m or 40 Inches from a door or window;
- b) closer than 1m or 40 Inches from a ceiling and floor;
- c) directly over or next to a power-outlet;
- d) underneath or over a sink, a basin or under a table;
- e) over or near any portion of a heating or cooking appliance.

**Also : To reduce the risk of fire or electric shock, do not operate any heating appliance beneath the mounted unit.**

### Dry Wall Mounting

1. Use a Phillips screwdriver to insert the wall anchors. Rotate the anchors clockwise while pushing them gently into the wall. They have threads which are designed to engage the dry wall as they are turned. Continue to rotate them until their flange touches the dry wall surface.
2. Insert the metal screws into the installed wall anchors turning the screws clockwise and leaving approximately ½\"/>
3. Align the wall-bracket over the screw heads and slide the bracket down until the slots fully engage the screw heads. Tighten or loosen screws as needed to fit the wall-bracket snugly against the wall.

### Stud Mounting

1. With a screwdriver insert the metal screws directly into the studs clockwise until tight (you may wish to predrill a hole into the stud using an appropriate drill bit and power drill).
2. Align the wall-bracket over screw heads so that the slots provided on the back of the bracket engage with the screw heads. Gently press the bracket down to form a firm engagement.

*thank you for your purchase*